



INITIAL STARTUP INSTRUCTIONS (WITH INCLUDED RECHARGEABLE BATTERIES)

- Taking notice of the + and – signs, correctly insert the batteries and install the battery cover.
- Do not try to power up the unit. Plug one end of the AC wall adapter into the YESAIR and the other end into a wall outlet.
- A lightning bolt icon will appear, flashing on the screen indicating the unit is charging. The icon disappears when the unit is fully charged.
- A full charge may take up to 8 hours, depending on the battery level at time of shipment.

ROUTINE RECHARGEABLE BATTERY CHARGING INSTRUCTIONS

The bar within the battery icon indicates the level of charge. It will reduce in length as the battery level gets lower, eventually disappearing, indicating the unit needs to be charged again.

Turn OFF the YESAIR BEFORE charging. Plug the YESAIR into the wall using the AC wall adapter. The lightning bolt icon will continue flashing on the screen until the unit is fully charged and then it will disappear.

BATTERY WARNINGS

Properly shutdown the YESAIR before removing the batteries. **DO NOT** remove the batteries while the YESAIR is running or the unit may not start properly on the next start-up. If this happens, remove and re-install the batteries or use the wall adapter to power the device. Once it has properly shutdown, it will operate correctly on start-up again.

If using the extended battery pack, the YESAIR will take twice as long to fully charge.

Do not put a fully charged battery pack on a YESAIR with discharged batteries. The level of charge of the battery pack and the batteries should be similar, full or discharged.

DATA LOGGING WARNINGS

OPEN the YES Viewer application on the computer **BEFORE** connecting the YESAIR to the computer.
CLOSE the YES Viewer application on the computer **BEFORE** disconnecting the YESAIR from the computer.
The YESAIR stops data logging when it is connected to a computer.

ALWAYS TURN OFF YESAIR BEFORE removing the SD card or the data will be corrupted.